-Montageanleitung-

Radabdeckung
–MINI & BMW–



(english version see page 7)

Allgemeine Hinweise!

AC Schnitzer Radabdeckung MINI & BMW

Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt.

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Alle Abbildungen zeigen LHD Fahrzeuge. Bei RHD Fahrzeugen ist sinngemäß oder nach gesonderten Montagehinweisen vorzugehen.

Im zugehörigen TÜV Gutachten der jeweiligen Rad / Reifenkombination wird in den Auflagen darauf hingewiesen, dass eine vollständige Radabdeckung durch geeignete Maßnahmen zu gewährleisten ist !
Dieser Satz Radabdeckungen umfasst Bauteile für jeweils **eine** Fahrzeugachse.

Montage

Bauteile und Flächen die miteinander verklebt werden, müssen grundsätzlich sauber und fettfrei sein!

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt ca. **4 AW**.

Benötigtes Werkzeug

Akkubohrer oder ähnliches
3mm Bohrer


AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

Gelieferte Bauteile

AC Schnitzer Radabdeckung MINI & BMW

➡ **Bei MINI Countryman F60 nur die hinteren Radabdeckungen (Abb. B) verwenden !**

➡ **Bei BMW X4 G02 nur die hinteren Radabdeckungen (Abb. B) verwenden !**

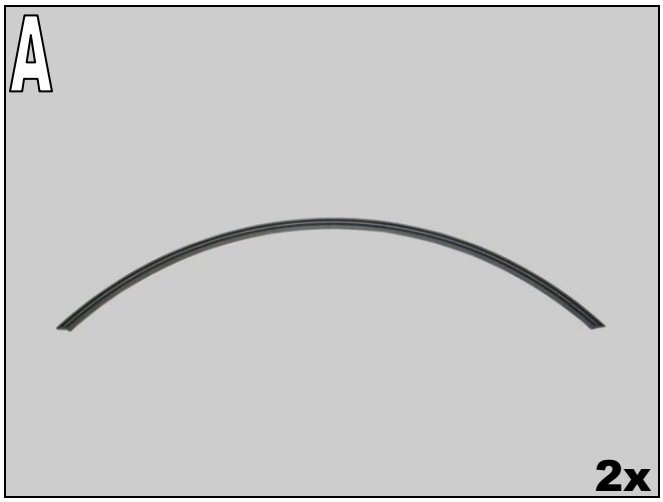



A 1 Satz Radabdeckungen vorne (passend für eine Fahrzeugachse rechts & links)
AC Schnitzer Teilenummer: **5119 660 110**

B 1 Satz Radabdeckungen hinten (passend für eine Fahrzeugachse rechts & links)
Original BMW Teilenummern: **B5112 149 29 24 (hinten rechts)**
B5112 149 29 25 (hinten links)

C 6x Blechschraube 3,9x13mm

Im zugehörigen TÜV Gutachten der jeweiligen Rad / Reifenkombination wird in den Auflagen darauf hingewiesen, dass eine vollständige Radabdeckung durch geeignete Maßnahmen zu gewährleisten ist !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

AC Schnitzer Radabdeckung MINI & BMW

Montage der AC Schnitzer Radabdeckung

1 Satz der AC Schnitzer Radabdeckungist passend für jeweils eine Fahrzeugachse. Nachfolgend wird die Montage an beiden Fahrzeugachsen beschrieben.



Vorderachse nicht für MINI Countryman F60 und BMW X4 G02 ! (siehe Seite 5 & 6)



Abb. 1 & 2
Die Radabdeckung wird vom Übergang Frontschürze zu Blende Radlauf mit einem Abstandsmaß von 100mm bündig am Radlauf angebracht. Radabdeckung ist selbstklebend.

Hinweis !
Die zu beklebenden Flächen müssen sauber und fettfrei sein!

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

AC Schnitzer Radabdeckung MINI & BMW

Montage der AC Schnitzer Radabdeckung

MINI Countryman F60

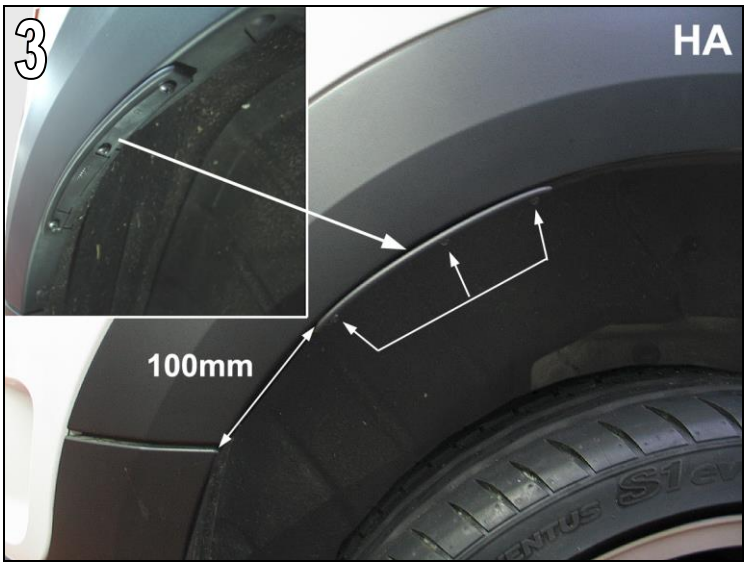


Abb. 3
Die Radabdeckung wird vom Übergang Heck-schürze zu Seitenwand mit einem Abstandsmaß von 100mm an Blende Radlauf angebracht.

Rechte & Linke Seite beachten !



Abb. 4
Radabdeckung im angegebenen Abstand anhalten und Bohrlöcher anzeichnen. Mit einem 3mm Bohrer ein Loch bohren und Radabdeckung mit den mitgelie-ferten Blechschrauben 3,9x13mm montieren.

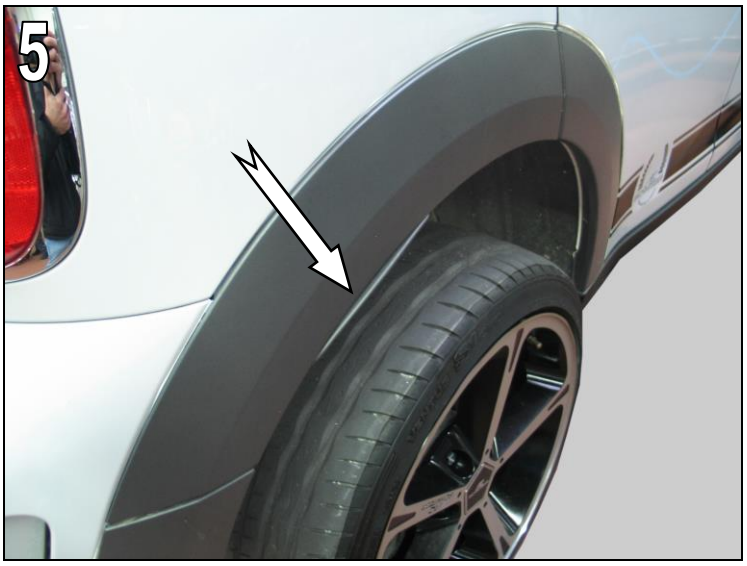


Abb. 5
Darauf achten, dass eine Radabdeckung gewähr-leistet ist !

Irrtum und Änderungen, sowie technische Weiterentwicklung vorbehalten !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

AC Schnitzer Radabdeckung MINI & BMW

Montage der AC Schnitzer Radabdeckung

BMW X4 G02



Abb. 6
Die Radabdeckung wird unterhalb vom Übergang Heckschürze zur Seitenwand angebracht.

Rechte & Linke Seite beachten !


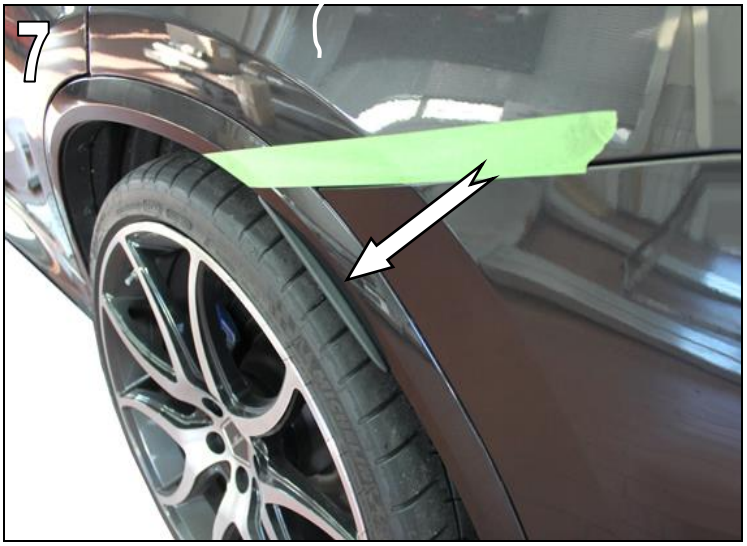


Abb. 7 & 8
Radabdeckung an abgebildeter Position anhalten und Bohrlöcher anzeichnen. Mit einem 3mm Bohrer ein Loch bohren und Radabdeckung mit den mitgelieferten Blechschrauben 3,9x13mm montieren.
(siehe Seite 5 Abb. 4)

Vorsicht - Heckschürzenkante ist sehr schmal.
Vorsicht - beim Bohren und schrauben !

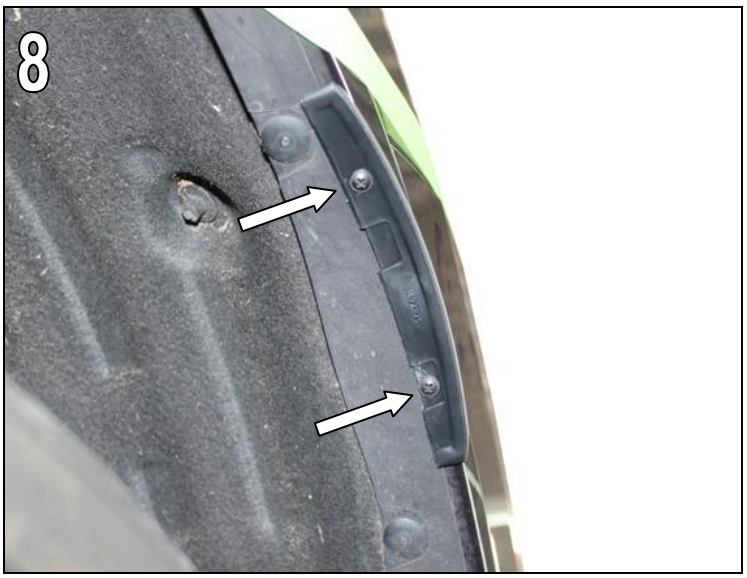

Darauf achten, dass eine Radabdeckung gewährleistet ist !

Irrtum und Änderungen, sowie technische Weiterentwicklung vorbehalten !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

AC SCHNITZER®

-Fitting Instructions-

Wheelarch Extension
– MINI & BMW –



General Notes !

AC Schnitzer Wheelarch Extension MINI & BMW

Important Notes !

These Fitting Instructions must be read in full before beginning installation work. AC Schnitzer bears no liability for damage caused by incorrect installation !

These Fitting Instructions are intended solely for use by authorised AC Schnitzer dealers.

These Fitting Instructions are in all cases directed at professionals trained in BMW vehicles who have the corresponding specialist knowledge.

All pictures show LHD vehicles. On RHD vehicles, proceed accordingly or according to separate Fitting Instructions.

The TÜV certificate for the wheel and tyre combination specifies as a condition that the wheel must be completely covered by suitable measures.
This set of wheelarch extensions comprises components for **one** vehicle axle.

Fitting

Components and surfaces to be glued together must first be thoroughly cleaned with cleaner !

Fitting Time (1 unit = 5 Minutes)

The fitting time is around **4 units.**

Tools Required

Cordless drill or similar
3mm bit


AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

Components Supplied

AC Schnitzer Wheelarch Extension MINI & BMW

➡ **For MINI Countryman F60, use only the rear wheel covers (Fig. B).**

➡ **For BMW X4 G02, use only the rear wheel covers (Fig. B).**

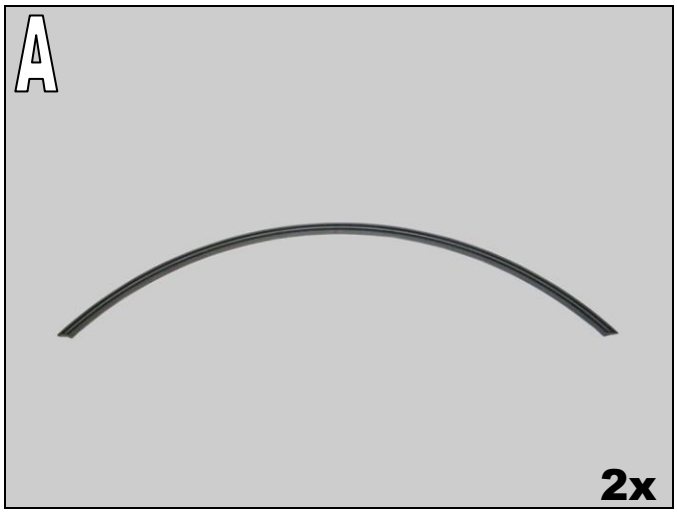



A 1 set wheelarch extensions front (suitable for one vehicle axle, right & left)
AC Schnitzer part number: **5119 660 110**

B 1 set wheelarch extensions rear (suitable for one vehicle axle, right & left)
Original BMW part numbers: **B5112 149 29 24 (rear right)**
B5112 149 29 25 (rear left)

C 6x self-tapping screws 3.9x13mm

The TÜV certificate for the wheel and tyre combination specifies as a condition that the wheel must be completely covered by suitable measures.

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

AC Schnitzer Wheelarch Extension MINI & BMW

Fitting the AC Schnitzer Wheelarch Extension

1 set of the AC Schnitzer wheelarch extensions is suitable for one vehicle axle. Fitting on both vehicle axles is described below.



Front axle not for MINI Countryman F60
and BMW X4 G02 !
(see page 5 & 6)



Fig. 1 & 2
The wheelarch extension is mounted flush to the wheelarch from the transition of the front skirt to the wheelarch panel with a spacing of 100 mm. The wheelarch extension is self-adhesive.

Note !
The adhesive surfaces must be clean and free from grease !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

AC Schnitzer Wheelarch Extension MINI & BMW

Fitting the AC Schnitzer Wheelarch Extension

MINI Countryman F60

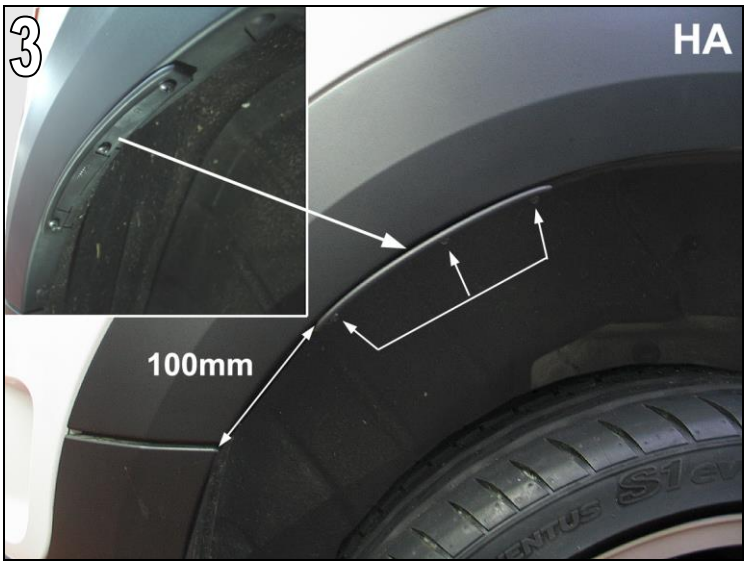


Fig. 3
The wheelarch extension is mounted on the wheelarch panel from the transition of the rear skirt to the side panel with a spacing of 100 mm.

Right and left sides are different !



Fig. 4
Hold the wheelarch extension at the specified distance and mark drilling holes. Drill a 3mm hole and mount the wheelarch extension using the self-tapping screws 3.9x13mm supplied.

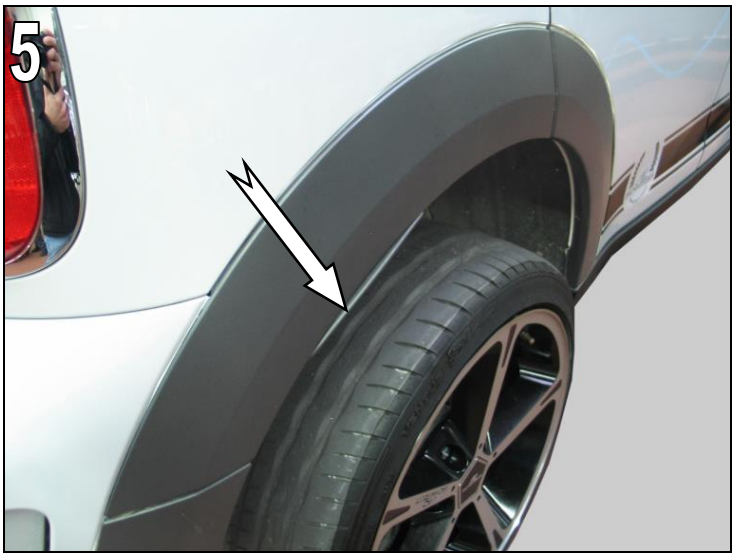


Fig. 5
Ensure that the wheel is fully covered!

Subject to errors, modifications and technical development !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

AC Schnitzer Wheelarch Extension MINI & BMW

Fitting the AC Schnitzer Wheelarch Extension

BMW X4 G02



Fig. 6
The wheelarch extension is mounted on the wheelarch panel from the transition of the rear skirt to the side panel.
Right and left sides are different !


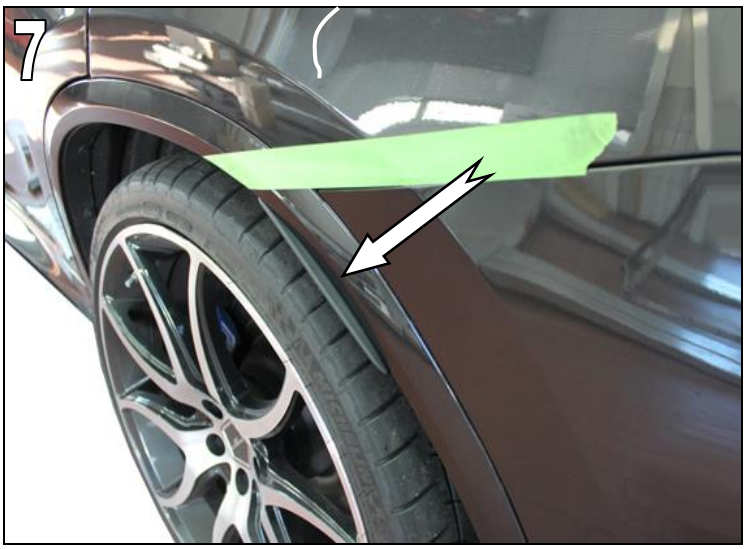


Fig. 7
Hold the wheelarch extension as shown and mark drilling holes. Drill a 3mm hole and mount the wheelarch extension using the self-tapping screws 3.9x13mm supplied. (see page 5 Fig. 4)

Note - rear skirt edge is very narrow.

Note - when drilling and screwing !

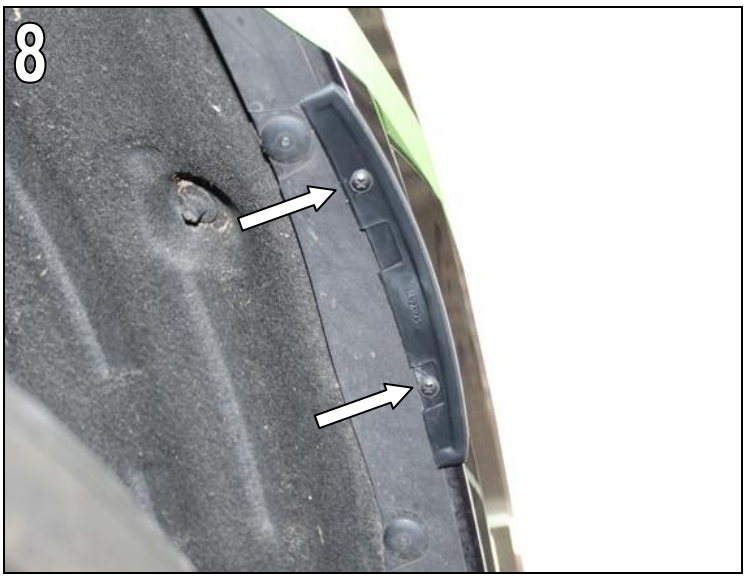

Ensure that the wheel is fully covered!

Subject to errors, modifications and technical development !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135