
AC SCHNITZER

-Montageanleitung-

Radhaus Gitter
G80-G81-G82-G83-G87

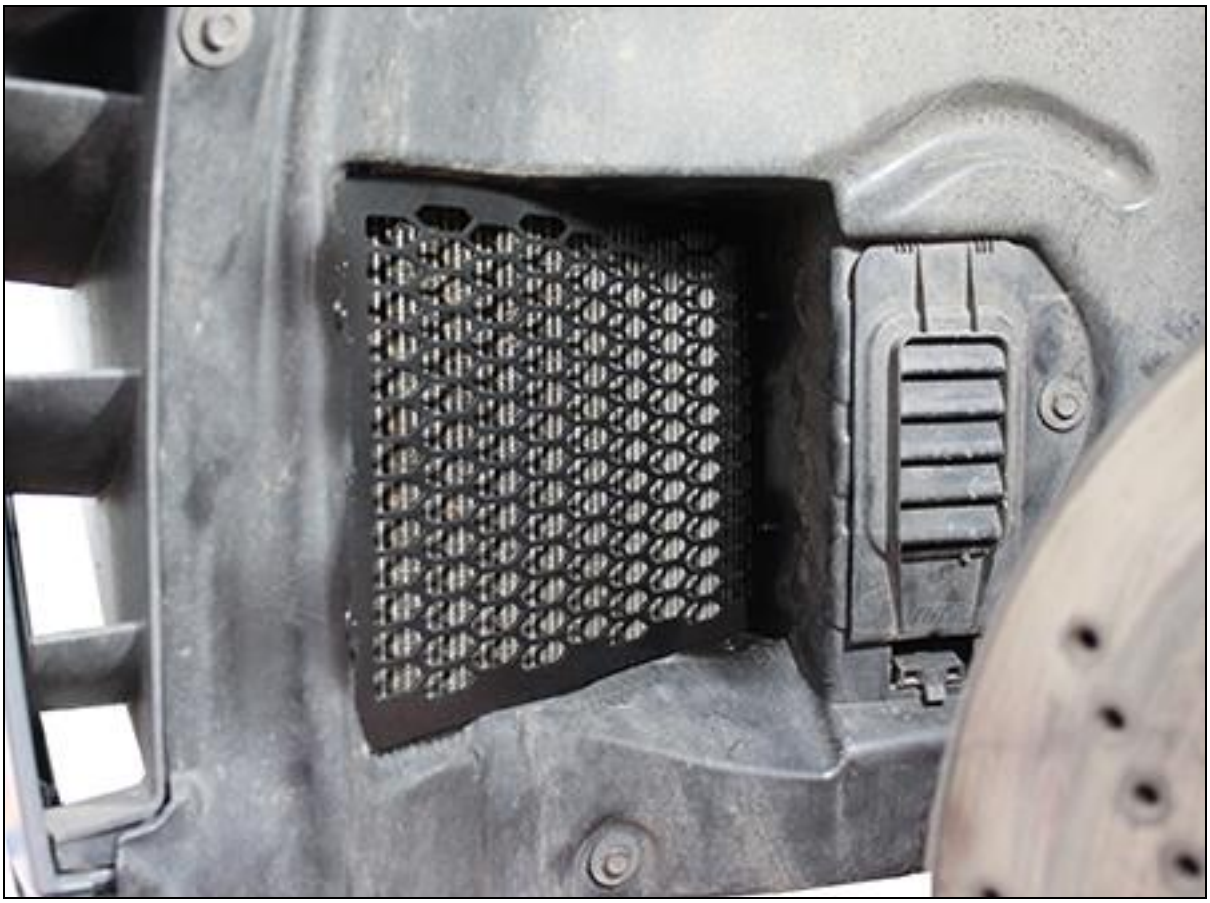

5171 387 520

(english version see page 9)

Allgemeine Hinweise !

AC Schnitzer Gitter Radhaus M-Modelle (G80-G81-G82-G83-G87)

Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Montage

Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen (z.B. Schutzbrille).

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt **6 AW**

Erforderliches Werkzeug

diverse Steckschlüssel
Luftsäge o.ä.
Blindnietenzange
Akkuschrauber und Bohrer

Gelieferte Bauteile

AC Schnitzer Radhaus Gitter M-Modelle (G80-G81-G82-G83-G87)

A



1x Satz

B



14x

A AC Schnitzer Radhaus Gitter rechts & links

B Blindnieten

AC Schnitzer Radhaus Gitter M-Modelle (G80-G81-G82-G83-G87)

Montage der AC Schnitzer Radhaus Gitter



Abb. 1
Radhaus ausbauen.
Dazu alle Befestigungsschrauben lösen.



Abb. 2 & 3
Seriengitter im Radhaus mit einer Luftsäge o.ä., sauber an den Stegkanten, aussägen.

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

AC Schnitzer Radhaus Gitter M-Modelle (G80-G81-G82-G83-G87)

Montage ...





Abb. 4
Schnittkanten entgraten.



Abb. 5
AC Schnitzer Radhaus Gitter in Serienradhaus passend einlegen und ausrichten.

Rechts & links beachten

AC Schnitzer Radhaus Gitter M-Modelle (G80-G81-G82-G83-G87)

Montage ...



Abb. 6
Durch die Befestigungsbohrungen des AC Schnitzer Radhaus Gitter, Bohrungen im Serienradhaus übertragen. Dazu mit **Ø 4mm** Bohrer Radhaus durchbohren.


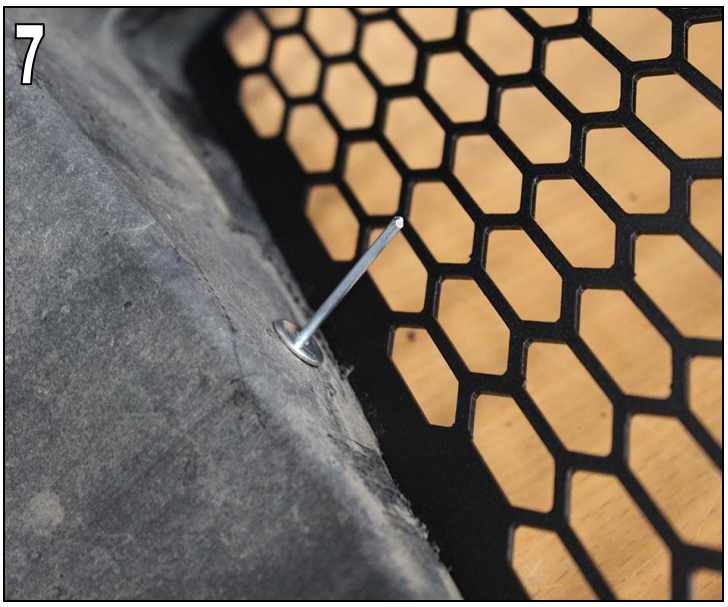


Abb. 7 & 8
Mitgelieferte Blindnieten einsetzen und AC Schnitzer Radhaus Gitter festnieten.

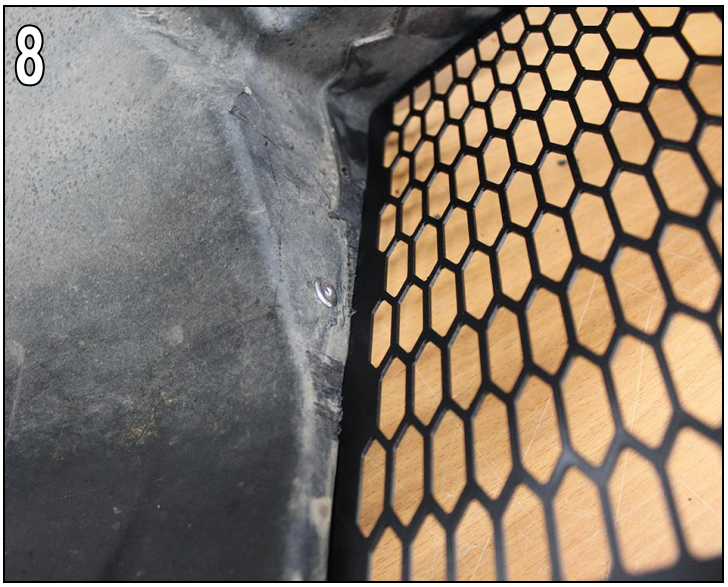


AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

AC Schnitzer Radhaus Gitter M-Modelle (G80-G81-G82-G83-G87)

Montage ...



Abb. 9 & 10
Serienradhaus einbauen.

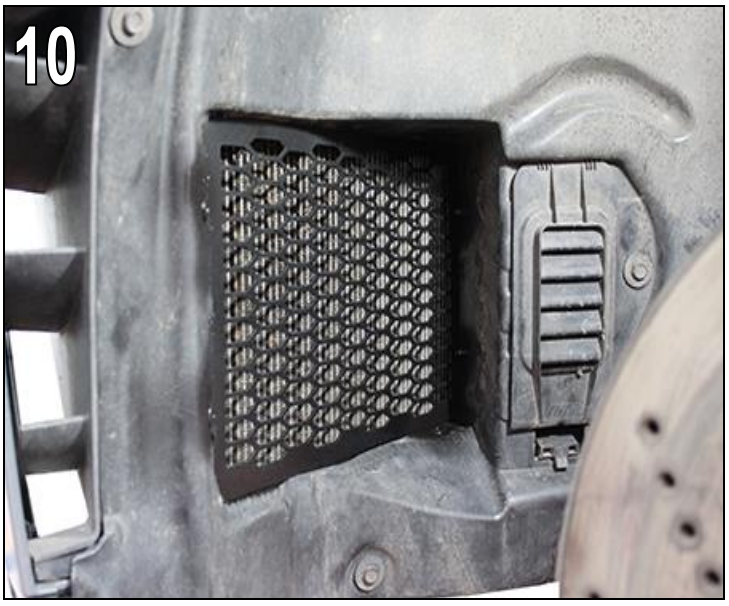

Irrtum, Änderung sowie technische Weiterentwicklung vorbehalten !


AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130


AC
SCHNITZER

AC SCHNITZER

-Fitting Instructions-

Wheel Arch Grille
G80-G81-G82-G83-G87

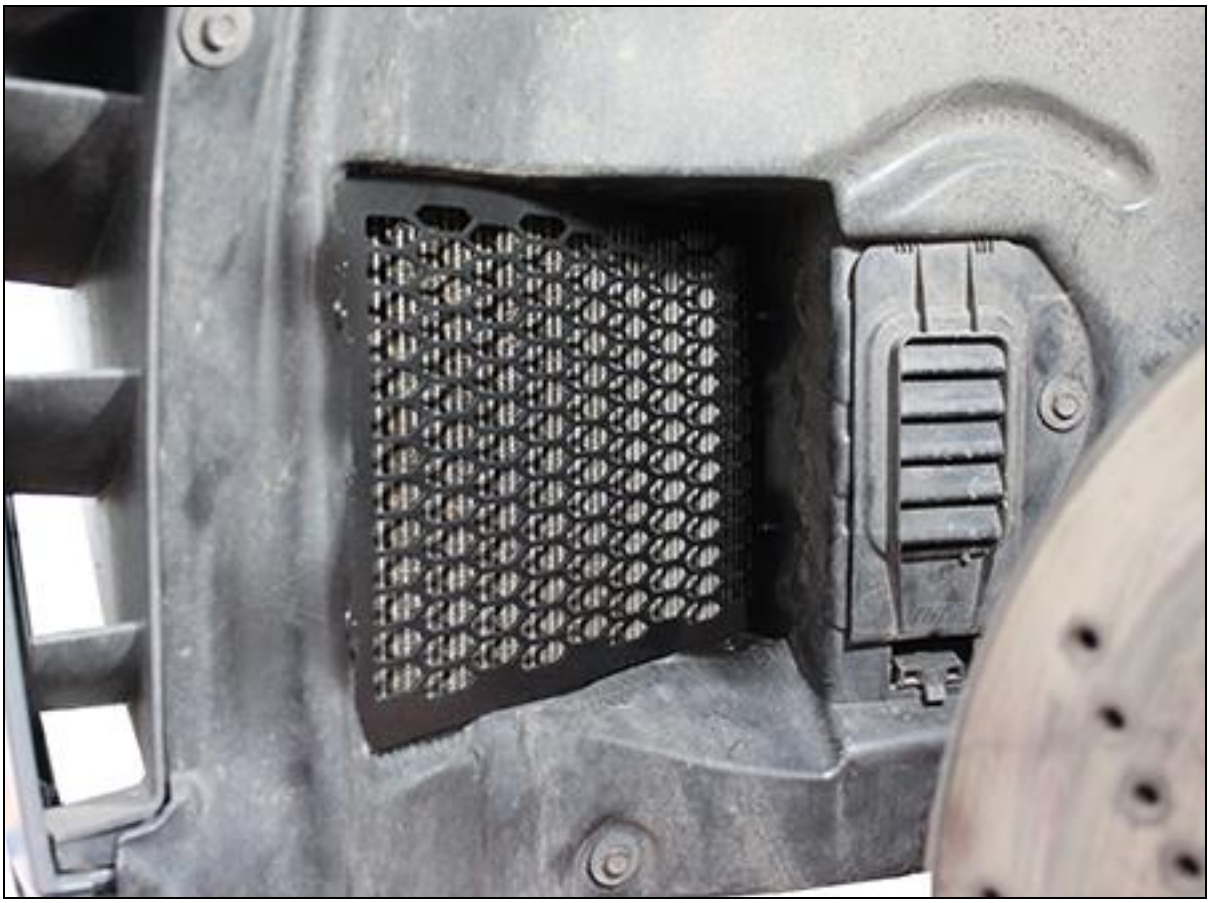

5171 387 520

General Notes !

AC Schnitzer wheel arch grille M-series (G80-G81-G82-G83-G87)

Important Notes !

It is essential to read these fitting instructions before starting the installation work. AC Schnitzer accepts no liability for damage caused by improper installation !

These fitting instructions are intended for use by qualified personnel with appropriate expertise who have been trained on BMW vehicles.

Fitting

All work must be carried out in accordance with the applicable safety regulations (e.g. safety goggles).

Fitting Time (1 unit = 5 minutes)

The fitting time is **6 unit**

Required tools

Various socket wrenches
Air saw or similar
Blind rivet pliers
Cordless screwdriver and drill

Supplied Components


AC Schnitzer wheel arch grille M-series (G80-G81-G82-G83-G87)

A



1x set

B

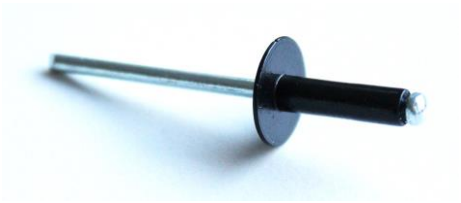

14x

A AC Schnitzer wheel arch grille right & left

B Blind rivet pliers

AC Schnitzer wheel arch grille M-series (G80-G81-G82-G83-G87)

Fitting the AC Schnitzer wheel arch grille



Fig. 1
Remove the wheel arch.
To do this, loosen all fastening screws.



Fig. 2 & 3
Cut out the standard grille in the wheel arch with an air saw or similar tool, taking care to cut cleanly along the edges.

AC Schnitzer wheel arch grille M-series (G80-G81-G82-G83-G87)

Fitting ...





Fig. 4
Deburr cut edges.



Fig. 5
Insert AC Schnitzer wheel arch grilles in standard wheel arches and align correctly.

Note right & left

AC Schnitzer wheel arch grille M-series (G80-G81-G82-G83-G87)

Fitting ...



Fig. 6
Transfer the mounting holes from the AC Schnitzer wheel arch grille to the standard wheel arch. To do this, drill through the wheel arch using a **4 mm** drill bit.


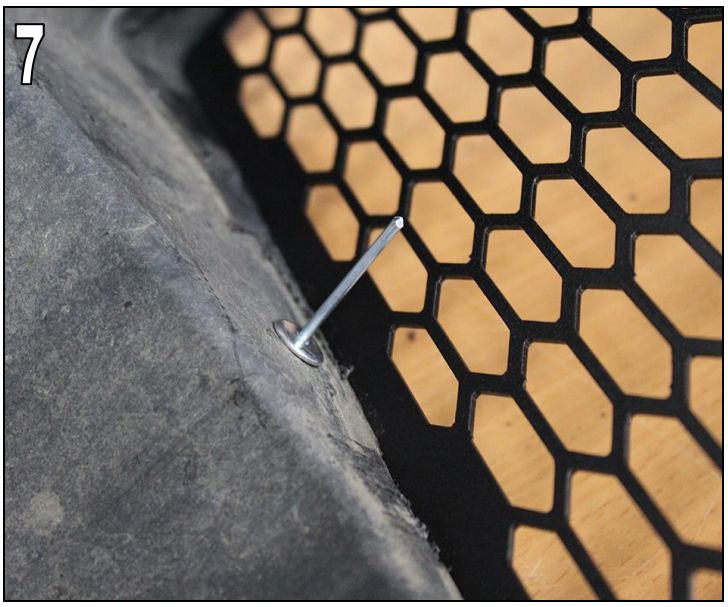


Fig. 7 & 8
Insert the blind rivets supplied and rivet the AC Schnitzer wheel arch grilles in place.

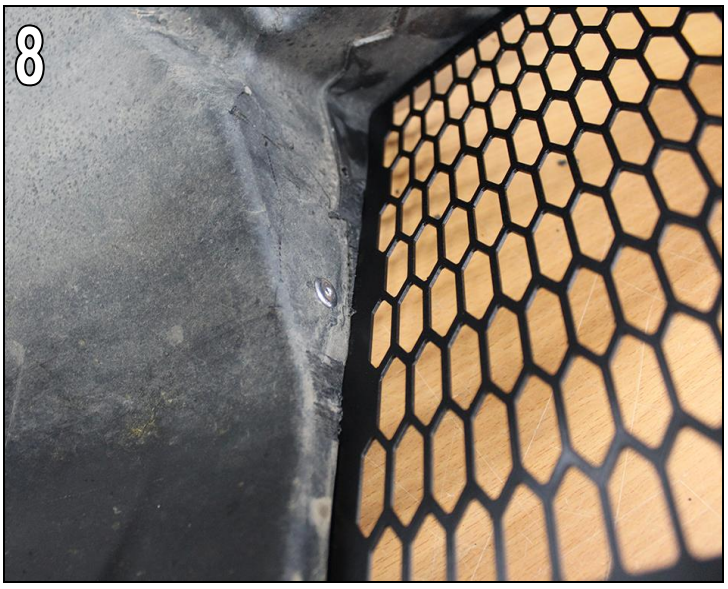


AC Schnitzer wheel arch grille M-series (G80-G81-G82-G83-G87)

Fitting ...



Fig. 9 & 10
Install standard wheel arch.

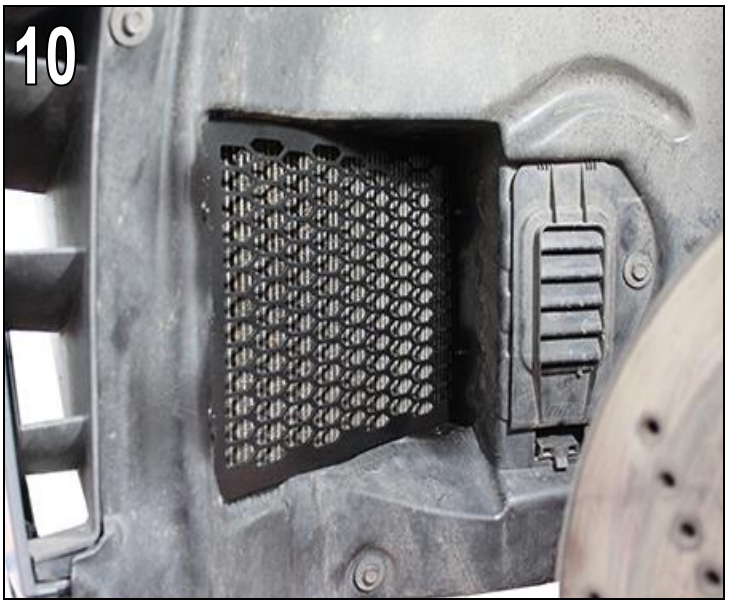

Subject to errors, changes and technical developments !


AC
SCHNITZER