-Montageanleitung-

Seitenschweller
- Schutzfolie -
G05



5171 305 120

(english version see page 3)

Montageanleitung

AC Schnitzer Seitenschweller Schutzfolie

Montage AC Schnitzer Seitenschweller Schutzfolie




Abb. 1
Klebefläche der der Seitenschweller reinigen und entfetten.

Tipp !
Klebefläche des Seitenschwellers und AC Schnitzer Seitenschweller Schutzfolie mit einer Montageflüssigkeit / Sprühflasche und o.ä. anfeuchten. So ist die AC Schnitzer Seitenschweller Schutzfolie leichter auszurichten.



AC Schnitzer Seitenschweller Schutzfolien sind unterschiedlich. Rechts & links beachten. AC Schnitzer Logo steht in Fahrtrichtung vorn.

Abb. 2
AC Schnitzer Seitenschweller Schutzfolie mittig im Seitenschweller ausrichten.

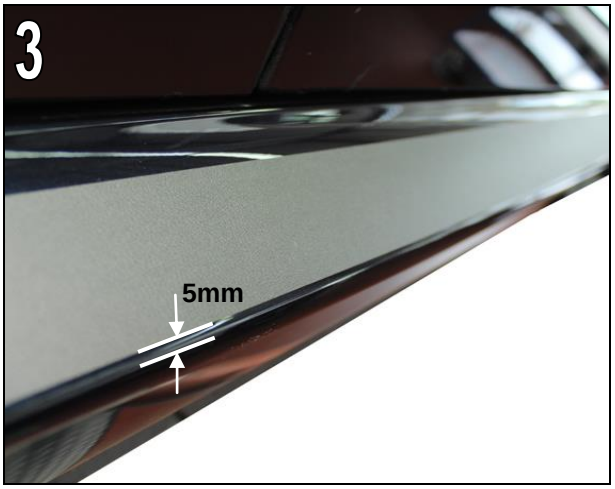

Tipp !
Weiter Person zur Hilfe nehmen.

Abb. 3
Der Abstand zur Seitenkante des Seitenschwellers sollte ca. 5mm betragen.



Abb. 4
AC Schnitzer Seitenschweller Schutzfolie andrücken und ggf. Luftblasen und Feuchtigkeitsblasen einer Montageflüssigkeit herausdrücken.

Achtung !
Nur Rakel mit einer Filzbeschichtung verwenden, da die Schutzfolie sonst zerkratzt würde.

Irrtum und Änderung und Weiterentwicklung vorbehalten !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135

-Fitting Instructions-

Side Skirt
- Protective Film -
G05



5171 305 120

Fitting Instructions

AC Schnitzer Protective Film Side Skirt

Fitting the AC Schnitzer Protective Film Side Skirt

Fig. 1
Clean and degrease the adhesive contact surface on the side skirt.



Tip !
If the adhesive contact surface is wet, installation fluid / spray bottle or similar the protective film is better to align.

AC Schnitzer protective films are different. Note right & left. AC Schnitzer logo is in front in the direction of travel.

Fig. 2
Align AC Schnitzer protective film centrally at the edge.



Tip !
Take another person to help.

Fig. 3
Distance to outer edge of the rear skirt should be approx. 5mm.

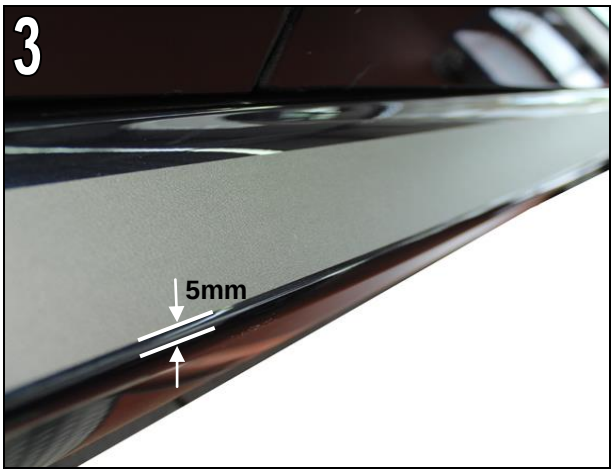


Fig. 4
AC Schnitzer protective film and, if necessary, press out air bubbles and moisture bubbles of an installation fluid.



Note !
Only use a scraper blade with a felt coating, otherwise the protective film would be scratched.

Subject to errors and modifications !

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135