-Montageanleitung-

Federwegbegrenzung
&
Freischnitt Radlauf HA
&
Radlaufabdeckung HA

X3M (F97) / X4M (F98)

(englisch version see page 5)

Montageanleitung

AC Schnitzer Federwegbegrenzung & Freischnitt Radlauf HA X3M / X4M

Bei Fahrzeugen mit Luftfederung entfällt der Verbau der Federwegbegrenzer.

Räder an der Hinterachse demontieren.

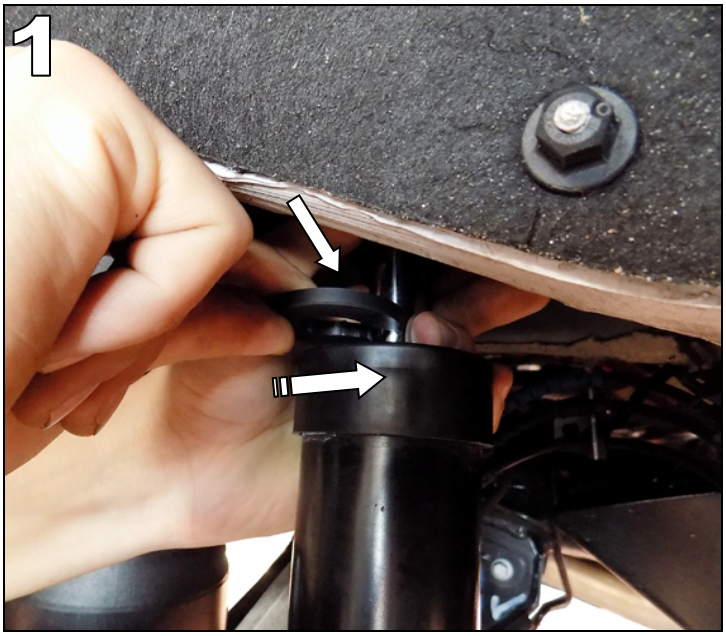


Abb. 1
AC Schnitzer Federwegbegrenzer an der Hinterachse verbauen.

Ggf.
Schutzmanschette des Stoßdämpfers nach oben schieben.

AC Schnitzer Federwegbegrenzer an der Öffnung leicht aufbiegen und über die Stoßdämpferkolbenstange drücken.

Anzahl der zu verbauenden Federwegbegrenzer:

HA pro Seite: 4x Federwegbegrenzer verbauen (8 pro Achse)

Ggf.
Stoßdämpfermanschette wieder nach unten über den Stoßdämpfer ziehen.





Abb. 2 & 3
Radlauf an der Hinterachse, im markierten Bereich, mit einem Heißluftfön vorsichtig erwärmen und mit einem Cuttermesser ausschneiden.

Räder an der Hinterachse wieder montieren.
Anzugsdrehmoment der Hinterräder beachten.

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

AC Schnitzer Federwegbegrenzung & Freischnitt Radlauf HA X3M / X4M

Hinterachse

Abb. 4
Abdeckband entlang der Heckschürzenkontur, wie abgebildet, anbringen.



Serienradlauf von Schmutz befreien. Klebefläche muss frei von Schmutz und Fett sein.

Abb. 5
AC Schnitzer Radlaufadeckung an der vorderen Ecke des Abdeckbands ansetzen und nach hinten, entlang dem Serienradlauf, aufkleben.

Dazu die rote Schutzfolie am Klebestreifen entfernen.





Irrtum und Änderung sowie
technische Weiterentwicklungen vorbehalten !

-Fitting Instructions-

Spring travel limit
&
Free cut wheel arch RA
&
Wheel arch cover

X3M (F97) / X4M (F98)

AC Schnitzer spring travel limit & free cut wheel arch rear axle

Vehicles with air suspension do not require the installation of the spring travel limiter.

Remove the wheels rear axles.

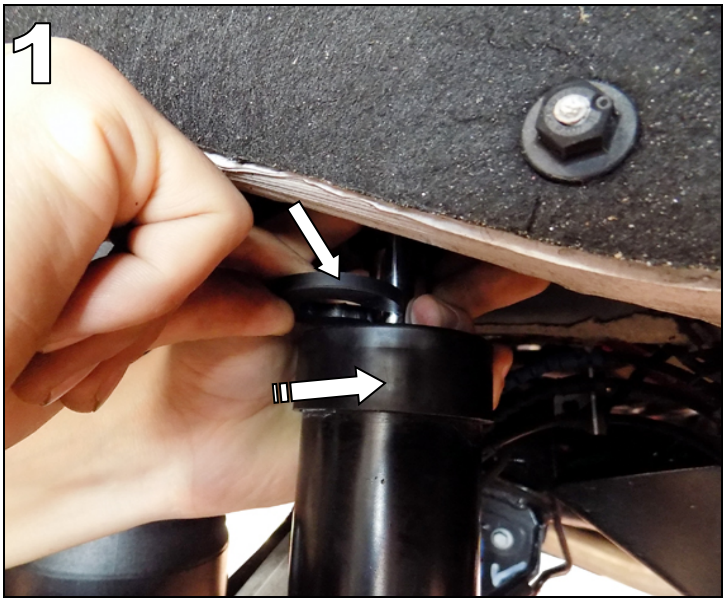


Fig. 1
AC Schnitzer spring travel limiter to be installed on the front and rear axle.

If necessary,
push the protective sleeve of the shock absorber upwards.

AC Schnitzer spring travel limiter slightly bend open at the opening and press over the shock absorber piston rod.

Number of spring travel limiters to be installed:

RA per side: 4x spring travel limiters
(8 per axle)



If necessary,
pull the shock absorber sleeve back down over the shock absorber.



Fig. 2 & 3
Carefully warm up the wheel arch on the rear axle, in the marked area, with a hot air dryer and cut it out with a cutter knife.

Refit the wheels on the rear axles.

AC Schnitzer spring travel limit & free cut wheel arch rear axle

Rear axle



Fig. 4
Attach masking tape along the rear skirt contour, like show.

Remove dirt from the standard wheel arch. Adhesive surface must be free of dirt and grease.



Fig. 5
Position the AC Schnitzer wheel arch cover on the front corner of the masking tape and glue it on at the rear, along the standard wheel arch.

Remove the red protective foil from the adhesive strip.



Subject to errors, modifications and technical development !