-Montageanleitung-

Frontgrill
MINI LCI-2



5111 256 210 /-220

(english version see page 9)

Allgemeine Hinweise !

AC Schnitzer Frontgrill MINI LCI-2

Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt.

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW / MINI Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Alle Abbildungen zeigen LHD Fahrzeuge, bei RHD Fahrzeugen ist sinngemäß oder nach gesonderten Montage-hinweisen vorzugehen.

Als Hersteller sind wir verpflichtet darauf hinzuweisen, dass jegliche Veränderungen, die Sie am für den öffentlichen Verkehr zugelassenen Fahrzeug vornehmen, der Abnahme durch eine Prüfstelle und Eintragung in die Fahrzeug-papiere bedarf !

Da die gesetzlichen Bestimmungen von Land zu Land variieren können, bitten wir Sie sich bei den zuständigen Behörden zu erkundigen.

Montage

Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen (z.B. Schutzbrille).

5111 256 220
AC Schnitzer Frontgrill für JCW (John Cooper Works) oder JCW Aerodynamik und Cooper S

5111 256 210
AC Schnitzer Frontgrill für One, Cooper und Cooper SE

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit für 5111 256 220 beträgt **4 AW**.

Die Einbauzeit für 5111 256 210 beträgt **6 AW**.

Benötigte Werkzeuge

Diverse Schraubenschlüssel
Diverse Sechskantmuttern mit Ratsche
Seitenschneider

Gelieferte Bauteile

AC Schnitzer Frontgrill MINI LCI-2

A



1x



oder





oder



A AC Schnitzer Frontgrill

B AC Schnitzer Montagesatz *(Fahrzeugabhänigig)*

besteht aus:
je 1x Montageadapter inkl. Gewindebolzen rechts & links, 2x Distanzblöcke, 2x Montagehalter, 4x Mutter selbstsichernd M4

C AC Schnitzer Aufkleber Teilekennzeichnung *(Fahrzeugabhänigig)*

AC Schnitzer Frontgrill MINI LCI-2

Montage des AC Schnitzer Frontgrills

Ggf.
Bei Fahrzeugen mit der Ausstattung Luftführung mit Klappensteuerung, kann zur besseren Montage die Frontschürze einseitig demontiert werden.



Abb. 1 Fahrzeuge mit Unterfahrschutz
Unterfahrschutz demontieren. Dazu alle 12 Befestigungsschrauben der Aluminiumplatte lösen.



Abb. 2 bis 4
AC Schnitzer Frontgrill in den Ausschnitt der Serienfrontschürze plazieren. Mit Kabelbinder rechts und links fixieren.

Um Beschädigungen an der Serienfrontschürze zu vermeiden, den AC Schnitzer Frontgrill zuerst unten an der Serienfrontschürze ansetzen und dann oben andrücken.



AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

AC Schnitzer Frontgrill MINI LCI-2

Montage ….



Abbildungen zeigen Montage für Cooper S und JCW. Bei MINI One, Cooper und Cooper SE ist sinngemäß vorzugehen.



Abb. 5
AC Schnitzer Montageadapter an der rechten und linken Seite des AC Schnitzerfrontgrills, bündig zur Frontschürzenkontur, einsetzen.

Rechts und links beachten.

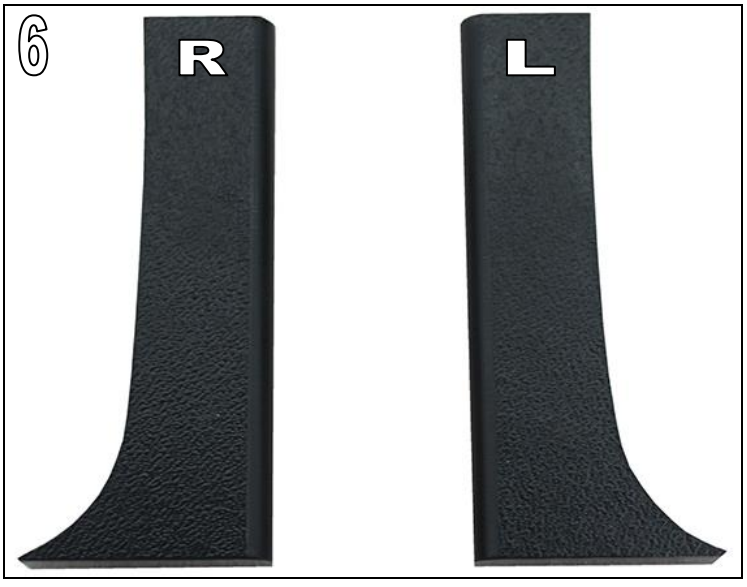


Abb. 6
Seitenangabe in Fahrtrichtung.

AC Schnitzer Frontgrill MINI LCI-2

Montage ….



Abb. 7
AC Schnitzer Frontgrill mittels Distanzblöcke, Halter und Muttern von hinten festschrauben.

.
.
.
…dazu
.
.
.

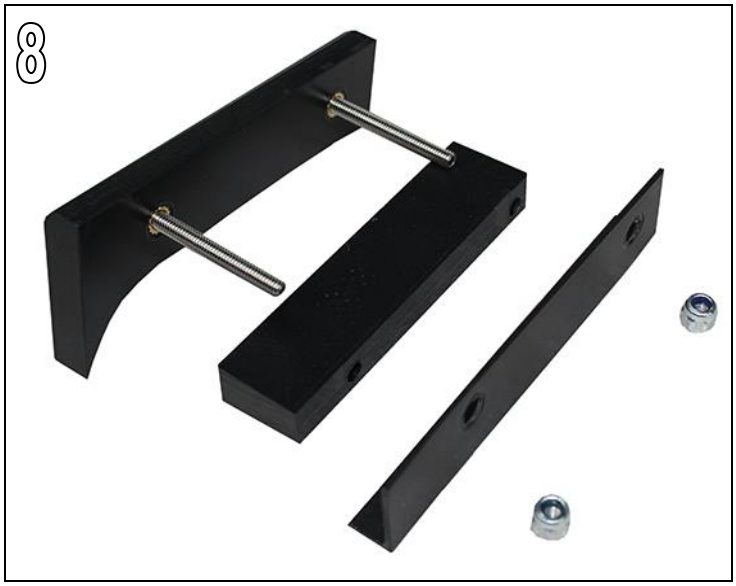


Abb. 8 & 9
Reihenfolge der Montage.

Lange Seite des AC Schnitzer Halters muss zur Fahrzeuginnenseite zeigen.



AC Schnitzer Frontgrill MINI LCI-2

Montage ….



Abb. 10
Die Montage erfolgt beim JCW und JCW Aerodynamik durch den Luftkanal der Serienfrontschürze.



Abb. 11 & 12
Beim Cooper S, MINI One, Cooper und Cooper SE erfolgt die Montage von unten.

Achtung:
Muttern nur soweit festziehen, bis ein fester Sitz der AC Schnitzer Montageadpter gewährleitet ist.



Kabelbinder entfernen.

Sofern vorhanden, Unterfahrschutz wieder montieren.

Irrtum, Änderung sowie technische Weiterentwicklung vorbehalten !

AC Schnitzer Frontsplitter 5111 256 260



AC SCHNITZER

-Fitting Instructions-

Front Grille

MINI LCI-2



5111 256 210 /-220

AC Schnitzer Front Grille MINI LCI-2

Important notes !

It is essential to read these installation instructions before starting installation work. AC Schnitzer accepts no liability for damage caused by improper installation !

These installation instructions are intended for use by authorized AC Schnitzer dealers.

The target group for these installation instructions is in any case specialist personnel trained on BMW / MINI vehicles with appropriate specialist knowledge.

All illustrations show LHD vehicles. For RHD vehicles, proceed analogously or according to separate installation instructions.

As a manufacturer, we are obliged to point out that any modifications you make to a vehicle approved for public use require approval by a test center and entry in the vehicle documents !

Since the legal regulations can vary from country to country, we ask you to inquire with the responsible authorities.

Fitting

All work must be carried out in compliance with the applicable safety regulations (e.g. protective goggles).

5111 256 220
AC Schnitzer Front Grille for JCW (John Cooper Works) or JCW aerodynamic and Cooper S

5111 256 210
AC Schnitzer Front Grille for One, Cooper and Cooper SE

Fitting time (1 unit = 5 minutes)

The fitting time for 5111 256 220 is **4 AW** unit.
The fitting time for 5111 256 210 is **6 AW** unit.

Required tools

Various wrenches

Various hexagon nuts with ratchet

Side cutter

Supplied Components

AC Schnitzer Front Grille MINI LCI-2


A



1x



or

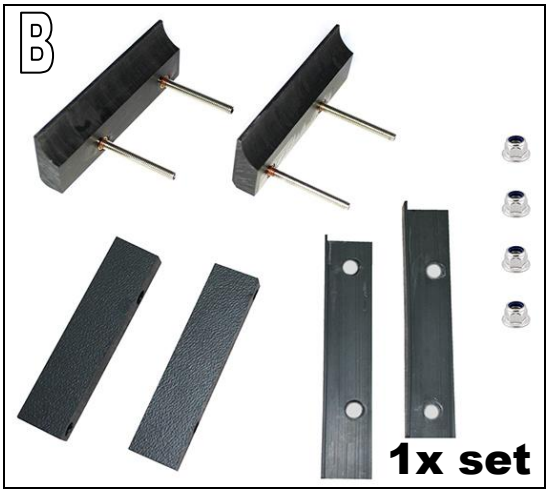



or



A AC Schnitzer front grille

B AC Schnitzer fitting set *(vehicle-dependent)*

consists of:
each 1x fitting adapters inc. threaded bolt right & left, 2x spacer blocks, 2x fitting brackets,
4x nut self-locked M4

C AC Schnitzer sticker parts indentification *(vehicle-dependent)*

AC Schnitzer Front Grille MINI LCI-2

Fitting the AC Schnitzer Front Grille

If necessary
At vehicles equipped with air ducting with flap control, the front skirt can be removed on one side for better installation.



Fig. 1 vehicles with underbody panelling
Remove the underbody panelling. To do this, loosen all 12 fixing screws of the aluminum plate.



Fig. 2 until 4
Place the AC Schnitzer front grille in the cut-out of the standard front skirt. Fix with cable ties right and left.

To avoid damage to the standard front skirt, first place the AC Schnitzer front grille on the bottom of the standard front skirt and then press on the top.



AC Schnitzer Front Grille MINI LCI-2

Fitting ….



Figures shows installation for Cooper S and JCW. Proceed analogously for MINI One, Cooper and Cooper SE.



Fig. 5
Insert the AC Schnitzer fitting adapter on the right and left side of the AC Schnitzer front grille, flush with the front skirt contour.

Note right and left.

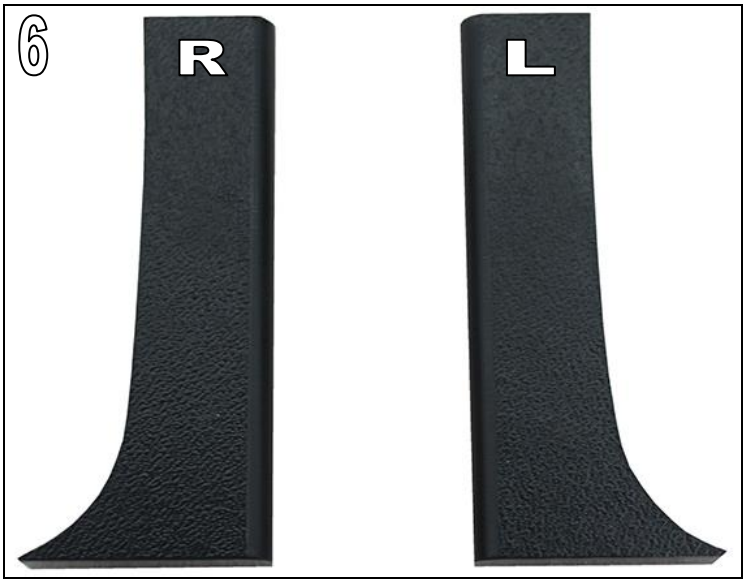


Fig. 6
Side indication in direction of travel.

AC Schnitzer Front Grille MINI LCI-2

Fitting ….



Fig. 7
Screw down AC Schnitzer front grille from behind, using spacer blocks, brackets and nuts.

.
.
.
…to do this
.
.
.

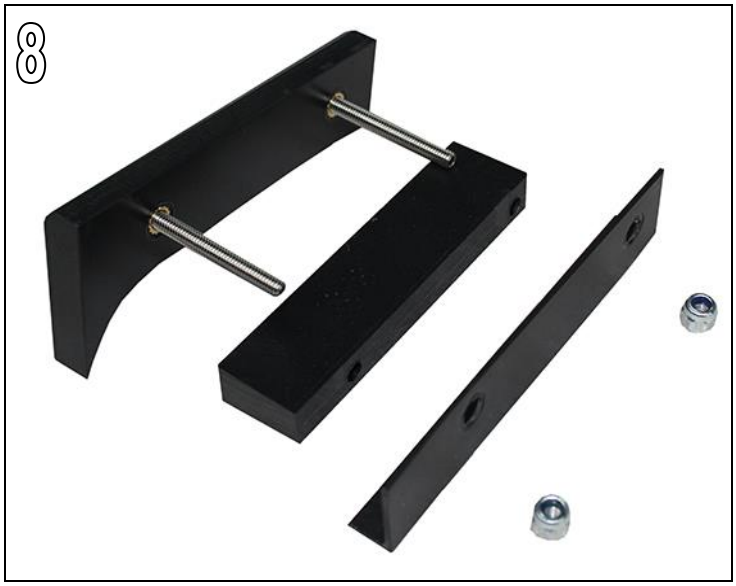


Fig. 8 & 9
Sequence of installation.

The long side of the AC Schnitzer bracket must face the inside of the vehicle.



AC Schnitzer Front Grille MINI LCI-2

Fitting ….



Fig. 10
The fitting is done on the JCW and JCW aerodynamics through the air duct of the standard front skirt.



Fig. 11 & 12
In the case of the Cooper S, MINI One, Cooper & Cooper SE installation is carried out from below.

Attention:
Tighten nuts only until a tight fit of the AC Schnitzer fitting adapter is ensured.



Remove cable ties.

If present, refit the undebody panelling.

Errors excepted, subject to change and technical development reserved !

AC Schnitzer Front Splitter 5111 256 260

