-Montageanleitung-

Seitenschweller
- Schutzfolie -
G06



5171 306 120

(english version see page 5)

Montageanleitung

AC Schnitzer Seitenschweller Schutzfolie

Montage AC Schnitzer Seitenschweller Schutzfolie



Abb. 1
Klebefläche der Serienseitenschweller reinigen und entfetten.

Klebefläche des Serienseitenschwellers und der AC Schnitzer Seitenschwellerschutzfolie mit einer Montageflüssigkeit / Sprühflasche und o.ä. anfeuchten. So ist die AC Schnitzer Seitenschwellerschutzfolie leichter auszurichten.

AC Schnitzer Seitenschwellerschutzfolien sind unterschiedlich. Rechts & links beachten. AC Schnitzer Logo steht in Fahrtrichtung hinten.



Abb. 2
Vom hinteren Radlauf, nach vorne gemessen, ein Markierung mittels Klebeband anbringen.
→ **135mm**

Tipp !
Weiter Person zur Hilfe nehmen.



Abb. 3
AC Schnitzer Seitenschwellerschutzfolie mit dem hinteren Ende an der Markierung ansetzen, ausrichten und andrücken. Luftblasen und Feuchtigkeitsblasen einer Montageflüssigkeit herausdrücken.

Montageanleitung

AC Schnitzer Seitenschweller Schutzfolie

Montage….

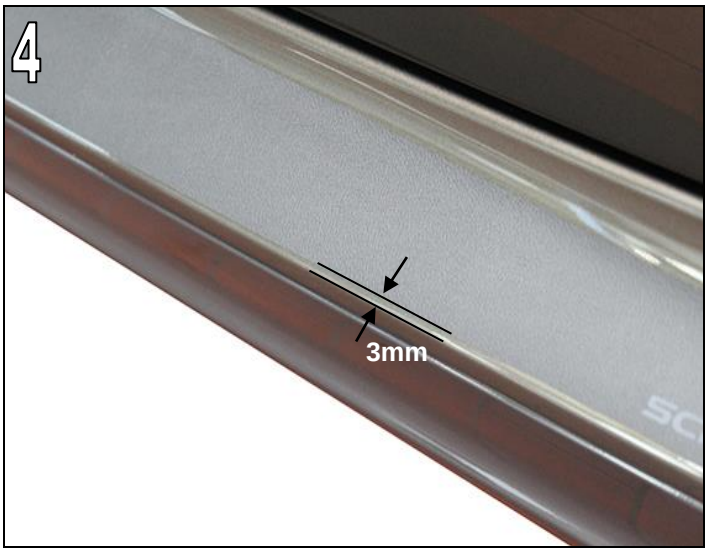


Abb. 4
Der Abstand zur Seitenkante des Serienseitenschwellers sollte ca. 3mm betragen.

Achtung !
Nur Rakel mit einer Filzbeschichtung verwenden, da die Schutzfolie sonst zerkratzt würde.



Irrtum und Änderung und Weiterentwicklung vorbehalten !


AC
SCHNITZER
jenseits der Serie.

-Fitting Instructions-

Side Skirt
- Protective Film -
G06



5171 306 120

AC Schnitzer Protective Film Side Skirt

Fitting the AC Schnitzer Side Skirt Protective Film



Fig. 1
Clean and degrease the adhesive contact surface on the side skirt.

If the adhesive contact surface is wet, installation fluid / spray bottle or similar the AC Schnitzer side skirt protective film is better to align.

AC Schnitzer side skirt protective films are different. Note right & left. AC Schnitzer logo is in rear in the direction of travel.



Fig. 2
From the rear wheel arch, measured towards the front, make a mark using adhesive tape.
→ **135mm**

Tip !
Take another person to help.



Fig. 3
Place AC Schnitzer side skirt protection film with the rear end at the marking, align and press on. Press out air bubbles and moisture bubbles of assembly fluid.

AC Schnitzer Protective Film Side Skirt

Fitting….

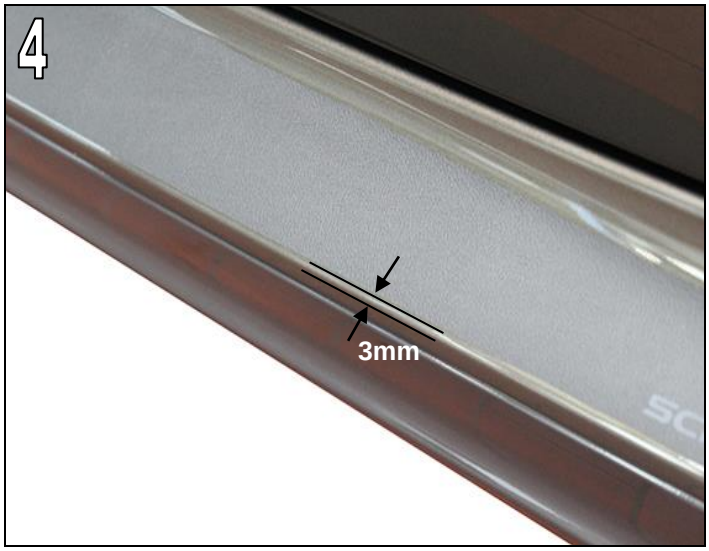


Fig. 4
Distance to outer edge of the rear skirt should be approx. 3mm.



Note !
Only use a scraper blade with a felt coating, otherwise the protective film would be scratched.

Subject to errors and modifications !


AC
SCHNITZER
beyond the standard.